



AV-E702T e-Book Reader with Touch Screen
User's Manual V1.1.15



Introduction

Thank you for purchasing this EBook Reader.

This manual contains important safety information and operation instructions, so please read all these instructions carefully before using the EBook Reader and keeps it for future reference.

This manual will help you use all of the exiting features to make your EBook Reading more enjoyable.

We have done our best to produce a complete and accurate manual; however, we cannot ensure there are no errors or omissions. We also have no responsibility for damages or loss of data caused by improper operation.

The instruction manual is subject to change for improvement without notice.

Their respective companies or organizations own trademarks and trade names used in this user's manual.

CONTENT

Regulatory Information: FCC Part 15 / Copyright	3
Important Safety Precautions	3-4
Main Features	6
Overview	7
Getting Started	8
Turn on the E-Book reader	8
Connect to the PC & Download files from PC	8
Information about e-Books, epub, DRM, Adobe Digital Edition	9
Inserting Micro SD card	10
Charging the battery	11
Using home menu	12
Item introduction	12
Tips for your using	13
Reading E-Book	14
Now reading	15
Reading a book from history	15
EBook function menu	16
Reading EBook with background music	17

Listening to Music	18
Playing music	19
Music function menu	19
Repeat / Equalizer	19
Lyric Displaying	20
Viewing Photos	21
Playing a slide show	21
Calendar / Applications / Tools	22
Settings Brightness / Backlight time / G Sensor /	22
Erase Activation Record / Media Lib Update / Language / Time/ Date	23
Explorer / Calibration Touch Screen adjustment	24
System Information	24
Troubleshooting	25
Specifications	26

Regulatory Information: FCC Part 15

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Important Safety Precautions

Always follow these basic safety precautions when using your device. This will reduce the risk of product damage and personal injury.

- Do not disassemble, repair or modify the device by yourself. Refer servicing to qualified personnel.
- Do not dispose of the device in fire to avoid explosion because the device has built-in battery.
- Do not touch the device with bare hands if the built-in battery is leaking. In this case, contact service center for help since the liquid may remain in the device. If your body or clothes has contacted with the battery liquid, wash it off thoroughly with water. Also, if some of liquid gets into your eyes, do not rub your eyes but immediately wash them with clean water, and consult a doctor.
- Keep the device away from direct sunlight and heat source.
- Do not expose the unit to rain or moisture to avoid any malfunction.
- Do not use the device in rather dry environment to avoid static.
- Never apply heavy impact on the device like dropping it or placing it on the magnet.
- Route USB cable so that people and pets are not likely to trip over or accidentally pull on them as they move around or walk through the area.
- Disconnect the USB cable from the computer when you do not use the device for a long time.
- Clean only with dry cloth. Make sure the device is turned off before cleaning. Do not use liquid cleanser.

- Be sure to back up your files. We will not be liable for the loss of data due to improper operation, repair or other causes.
- At full power, the prolonged listening of the walkman can damage the ear of the use.

Precautions in using the headphone

- Do not use the headphone while driving an automobile or riding a bicycle. It is not only dangerous, but also against the law. To avoid an accident, do not turn up the volume of the headphones too high while walking.
- It's not recommended that you use the headphones at a high volume for an extended time as this may cause hearing damage.



 
BOX CONTENT:

e-Reader
Stylus Pen
Earphone
USB cable
100-240 Volt adapter
Soft Pouch
User Manual

Main Features

- 7" TFT color display 600*800 with Touch Screen (4:3)
- Built-in rechargeable lithium battery
- Reading EBook in PDF/e-PUB/TXT, FB2, HTML, MOBI format
- Quick reading EBook in browse history
- Rotate the screen to toggle between vertical and horizontal display while reading EBook
- Playback of WAV, APE, FLAC, OGG, MP3 and WMA audio files
- Multiple equalizers (EQ) sound effects
- Display titles, artists and albums of music files (ID3 tag)
- Lyrics synchronization while music is playing
- Supports JPEG/GIF/PNG photo formats
- Folder navigation
- Compatible with Micro SD card (up to 16G)
- USB 2.0 high speed transmission

Overview

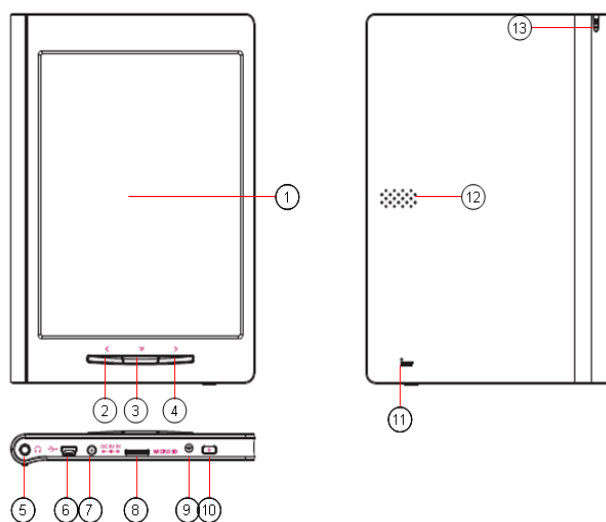

1. Display screen, touch screen
2. Left key [<]
3. [↵] Exit button
4. Right key [>]
5. Earphone jack
6. Mini USB connector
7. 5V 2A DC Input socket
8. Micro SD-card slot
9. Charge indicate LED (charging red, full green)
10. [⏻] Power on/off
11. RESET button
12. Loud speaker
13. Stylus (Touch pen)

Getting Started

Turn on the E-Book reader

Press and hold the [⏻] button to turn on the E-Book reader, if the device with low battery, plug one end of the power adaptor into the DC socket in the E-Book reader, and the other into a wall outlet.

Note: To turn off the E-Book reader, please press and hold the [⏻] button again.

Connect to the PC & Download files from PC

Connect the device to computer for downloading files or charging the device.

1. Make sure that your computer has been started before you start.
2. Connect the mini plug of the USB cable to the mini USB port on the device, and push the other end into a free USB port on your computer.
3. When the device is connected to your computer, a "Removable Disk" will be created in "My computer".
4. Open the Windows Explorer or My computer. "Removable Disk" is displayed.
5. Drag and drop the files on your computer to the "Removable Disk".
6. If you authorized the device *by using EBook website tools*, there will be a hidden folder such like "adobe-digital-editions" generate in your device. Please do not delete this hide "adobe-digital-editions" folder or format the device unless you want to re-authorize the device.

Note: The battery of the device is charging automatically when the device is connected to the computer. Don't disconnect the USB cable during file transferring. It may cause malfunction of the device and files.

IMPORTANT NOTE ABOUT eBooks:

EBooks in ePub format, are secured by met DRM (Digital Rights Management)

To download digital EBooks, put it on your eReader and read it, ePub format, you need the program

“Adobe Digital Editions” (ADE).

You can find this program via the website link: <http://www.adobe.com/products/digitaleditions/help/>


Download and install the program on your pc.

Then you can create an account, Adobe-id, and you have to authorize your e-Reader with your pc.

If you authorized the device *by using EBook website tools*, there will be a hidden folder such like “adobe-digital-editions” generate in your device. Please do not delete this hide “adobe-digital-editions” folder or format the device unless you want to re-authorize the device.

Disconnect the device from PC

After finishing transferring, please disconnect the device from the computer as the following:

- 1 Left click the  icon at the taskbar.
- 2 Click the pop-up mini-window with message of "Stop the USB Mass Storage Device –Driver (X)".
- 3 When you are prompted to remove the device, you can unplug the device safely.

Inserting Micro SD card

You can attach a Micro SD card to the E-Book reader.

1. Align your card with the slot. Put it in place.
2. Push the card until it is locked.

To remove the Micro SD card: press the card to release it and pull out the card.

Note: Please insert or pull out the card when the E-Book Reader is off, or the internal files of the device will be lost or damaged.

Charging the battery

- The battery of the E-Book reader is charging automatically when the device is connected to the computer or connected to a wall outlet. When charging, the indicate lighter is red, and it will turn green after it full charged.
- Read the battery level indication of your device:



Full



Three-quarters full



Half full



Low

 


Empty

Important:

- *The charging performance is better with the AC/DC adapter then when connected to the PC.*
- *Recommended temperature for battery charging is 0 °C to 35 °C.*
- *Fully charge it before you use the device for the first time or when you have not used it for a long time.*
- *Charge the device right now when the “Low battery” message is displayed.*
- *Do not over charge or discharge the device. Over charging or discharging will shorten the battery life.*
- *The battery could be over discharged if the device is not used for a long time (over three months). To avoid over discharge, fully charge the device every three months and always keep the voltage of the battery above 50%.*
- *If the device is not used for a long time, keep it under the temperature of 23±5°C and the moisture of 65 ±20% RH to maintain the performance of the battery.*

Using home menu

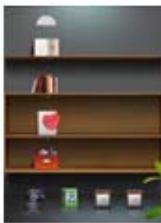

1. Press and hold the [⏏] button, the home menu appears on the screen.
Or, in another modes, press the [⏏] button to return to the home menu.
2. There are 8 functions on the main menu: Now reading, History, My Favorite, E-Book, Music, Photo, Calendar and Tools. Just tap the function you need by your finger or touch pen, then you can enter the desired mode

Item introduction



Home menu items	Description	Home menu items	Description
Now reading	Read further in the eBook you were reading.	Music	Play music tracks.
History	Browse your EBook reading history,	Photo	View photos.
My Favorite	Find your favorite eBook you have saved.	Calendar	See the Calendar
E-Book	List all your EBooks in the device	Tools	Settings, Explorer, Touch Screen Calibration



Tips for your using

- **Function menu:** while reading a book, watching a video, listen to music or browsing photos, you can tap the center of the screen to open function menu.
- **Exit:** press the [↩] button, you can exit and return to previous screen, hold the [↩] button you can exit to main menu directly.
- **Reset the E-Book reader:** If a malfunction of the E-Book reader occurs, take a metal pin, e.g. the end of a paper clip, and press it into the RESET button **CAREFULLY** to re-initialize the system of your E-Book reader.

Reading E-Book




1. In the main menu, tap and get in the **EBook** mode.
2. Find the desired ebook on the bookshelf and tap it twice to start reading.
3. If you have many books to looking for, then you can
 - a) press [<] or [>] button and
 - b) tap  or  icon on the screen to switch bookshelves.

You can press the [] button or tap the  icon to exit to previews screen.

Note: The EBook reader can synchronize the EBooks with DRM to itself by using EBook website tools. Different eBooks takes different time to open; normally the big size eBook takes more time to open.

While reading a book, you can:

- **Turn pages:** tap the left and right side of the screen to page up and page down.
- **Rotate:** set the screen to rotate automatically in the Tools/Setting function. Then the device can rotate automatically when you rotate it
- **Exit:** Press the [] button to return to Ebook library

Now reading



You can enter immediately the last read eBook directly through the “**Now reading**” function on the main menu.

Reading a book from history










1. In the main menu, tap the **History** then you will find the book recently read.
2. Tap the desired book twice to start reading the book.

EBook function menu




While reading a book, tap the **center of the screen** to open the EBook setting function menu,

1. Find the desired item.(include Exit, Favorite, Zoom, Goto, Brightness, Background, Bookmark,)

Icon	Menu items	Description	Icon	Menu items	Description
	Exit	Exit to previews screen		Brightness	Adjust the backlight brightness
	Favorite	Save the current ebook as favorite ebook.		Background	Set the reading back ground
	Zoom	To zoom in and out		Bookmark	Set and go to bookmark.
	Go to	Go to the specific percentage quickly.			

2. Tap the icon to select the item.

- **Favorite:** tap the favorite icon to save the Ebook as My Favorite Ebook.
- **Zoom in:** tap the zoom icon to pop-up window (A,A,A). tap one of them to adjust the font size
- **Goto:** tap the Goto icon to find the percentage (or table of content, this function is only available for the book contains the table of content) you like to start to read, and press the tap the percentage to confirm.

- **Brightness:** tap the brightness icon to select the brightness while reading the ebook, and press the [OK] button to confirm.
- **Background:** tap the background icon to switch a background. This function can be only used in the TXT format Ebooks.
- **Bookmark:** tap the bookmark icon. Find the column, and then press the tap it to confirm.
- **Load, delete and replace Mark:** Load the saved mark. Find a mark, tap, then use the tap the  load this mark, tap the  to delete this mark, and  to replace this old mark.

Tap  to exit menu.



Reading EBook with background music

1. In the main menu, tap the **Music** icon to enter music list.
2. Find desired audio file, and then tap it twice to start playing the song.
3. Then come back to main menu to enter a book you like to read.

Now, you can read your book with background music.

Listening to Music - Playing music



1. In the main menu, find and tap the **Music** icon to enter your music list.
2. Find the desired audio file and tap it twice to start listening to the song.
3. If you have many songs then you can
 - press [<] or [>] button and
 - tap  or  icon on the screen to turn to next page.



While music playing, you can:

- Tap 1 to exit to music list.
- Tap 2 to get in the music function menu
- Tap 3 or 4 to adjust volume
- Tap 8 or 10 to skip to previous/next track
- Tap 9 to start or pause the music play
- Press and hold [<] or [>] button to fast rewind or forward within a track;
- Press and hold the [⏮] button to turn off the EBook Reader.

Some information explaining

Place	Information	Place	Information	Place	Information
5	Music name	6	Album name	7	Singer
11	Repeat mode	12	Play mode	13	Lyric

Music function menu

While tap the 2 to enter the music function menu:

1. Find and tap the desired item.
2. Tap [OK] to confirm and get in the item.
 - **Repeat Mode:** find the below item and tap OK to confirm
 - a) Repeat: Repeat the current song.
 - b) All Repeat: Repeat all songs.
 - **Play mode:** find the below item and tap OK to confirm
 - a) In Order: Play all songs in order.
 - b) Shuffle: Play all songs at random order.
 - **EQ Setting:** Use [▲] or [▼] button to select your equalizer: Rock, Pop, Classic, Bass, Jazz or User EQ, tap OK to confirm.
 - **User EQ Setup:** setup the user EQ.
 - a) Just tap the value bar as you like to adjust the EQ.
 - b) After you finished adjust, tap [OK] to confirm or tap [⬅] to exit and not confirm.

Lyric Displaying



This device supports lyrics display while music playing. Only the lyrics in LRC format can be displayed.

To add lyrics to the music, take "love music. Mp3" for example:

1. Download the corresponding lyrics with extension ".lrc" from the Internet.
2. Rename the lyrics file as "love music.lrc". Make sure the lyrics filename is the same as the music file name.
3. Copy both files into the same folder on the EBook Reader.
4. The lyrics will be displayed on the screen while the music is playing.

Viewing Photos



1. In the main menu, find and tap the **Photo** icon to enter photo list screen
2. Find the desired picture file and tap it twice to start viewing the photo.
3. If you have many photos, then you can
 - press [<] or [>] button and
 - tap  or  icon on the screen to turn to next page.

While viewing photo, you can:




- **Skipping photos:** Press [<] or [>] button to skip to previous/next photo or tap the touch screen.
- **Exit:** Press the [>] button to return to picture list menu.
- **Power Off:** Press and hold the [>] button to turn off the EBook Reader.


Photo function menu

1. While viewing a photo, tap the center of the screen to open the photo function menu





2. In the photo function menu, you can :

Tap the  to zoom in and zoom out the picture.




Tap the  to start and pause the slideshow

Tap the  to set the slideshow interval time, you can choose 5s, 10s, 30s, 1min, 5min.

Tap the  or press [>] button to return to photo list menu

Calendar






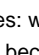


1. Use the  or  button to navigate among days.
2. Press the  button to exit the calendar.



Tools – system settings



1. In the main menu, tap the **App** icon to get in the Tool function.
2. In the **App** function, you can select Settings/ Explorer/ Touch Adjust.
3. Tap any of them twice to get in that function.

Settings When you get in the Settings.

1. Tap  for Brightness, Backlight, Automatic rotation, MediaLib Update, reset, Erase activation record.
2. Tap  to set the language.
3. Tap  to set the date and time.
4. Tap  to check the system information.
5. Tap the  or press [] button to return to App function menu

Notes: when you set one of the functions, you need tap the desired item twice and make sure that the  icon become 

Brightness adjust the desired brightness of the tft screen

Set the Backlight time (5,10,15,20,30sec or always on).

Set the automatic rotation (G-sensor)

When you set this function on, you can rotate the screen to toggle between vertical and horizontal display while reading a EBook



Erase activation record:

1. Tap **Erase activation record** tap “YES” and [ok] to confirm, then the system will erase the activation record and you can re-activate the device by other account now.
2. **Caution:** erase the activation record may cause your device cannot read the old DRM books you bought by the old account.










MediaLib update

1. Tap **MediaLib update** twice. This function is to update the internal memory when the memory changed.


Time and Date Setting

1. In **Time and date setting** function, just tap the number you want to revise.
2. After it turn red, tap  and  to adjust the number.
3. When you finished setting, please exit to save.

Explorer

1. Tap **Explorer** function in the **App** twice.
2. Tap twice to select memory files or card memory (if a memory card is inserted).
3. Find the desired file or folder.
4. If you have many files or folders in the device, then you can
 - press [<] or [>] button and
 - tap  or  icon on the screento turn to next page.
5. To open a folder, tap it twice.
6. When you find the desired file, tap it then you will open a tool bar 
 - Tap  to play this file directly.
 - Tap  to delete this file.
 - Tap  or Press [] exit operate.
7. Tap the  or press [] button to return to App function menu

Touch adjust

You can tap the **Touch Adjust** function in the **App** twice to enter the align screen, and then you will see a red cross  on the screen. Tap the center of the cross with the touch pen. When the cross moves to another position, tap the center of the new target. Repeat each time to complete the calibration process.

When tapping the screen on final step, center, the new settings will be stored and back to the App menu.

Troubleshooting

If you have problems in operating your device, please check the points below before sending it to service center.

Cannot power on / off

- The battery may be exhausted. Please recharge the battery.
- Try to connect to pc.

The display is going black after some time

- Adjust the Backlight time, in the settings menu

The display is not reacting correctly

- Align the screen, Touch adjust page 24

Files cannot be downloaded

- Check if the driver is installed correctly in the computer. Available on www.autovision.nl
- Check the connection between the device and PC.

No sound from the headphone

- Please ensure the volume is not 0, and the connection of headphone is no problem.
- Check if the format of music file is supported by the device.

The words of LCD display abnormality

- Please ensure you select the correct language.

The buttons do not work

- Press the reset hole at the back, with metal pin to re-initialize the system of the device.

Can't read, download eBooks

- Check DRM and authorization, see page 8.
- Is it the right e-Book format? Must be PDF, e-Pub, TXT

Specifications

Model Type	AV-702T	USB	2.0
Display	7" TFT LCD 4:3 Touch Screen	Size L*W*H: (mm)	187*132*13.2mm
Resolution	600*800	Support Card	Micro SD up to 16G
Power Supply	AC Adapter 5V 2A	Storage condition	Humidity<90%,-20~60°C
System compatible	Windows 7, VISTA, XP, MAC OS 10.0 and above	Working condition	Humidity <80%,0~45°C
E BOOK	Support PDF, e-PUB,TXT		
Photo format	JPEG 8000*8000pels, GIF 1000*1000pels ,PNG 960*720pels		
Music format	WAV,APE, FLAC, OGG, MP3, WMA.		
Battery	Include rechargeable battery 2900mAh Audio playtime>10-hr via headphone, book reading 8 hours/charge		



WEEE (Waste Electrical and Electronic Equipment Directive)

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Disposing of the battery / batteries

Please check local regulations for disposal of batteries or call your local city office or your household waste disposal service or the shop where you purchased the product.

The battery / batteries should never be placed in municipal waste. Use a battery disposal facility in your neighborhood or community, if available.

Implementation, changes, typographical faults under restrictions.

AV G\$ © 2011 V1.1.15

AV Audio® is a registered Trade Mark from Autovision UA - www.autovision.nl